

Cleaning and care instructions

AFTER EACH DRYING CYCLE



- Clean the lint filter
- Check the drum for foreign objects
- Check the door seal for foreign objects
- Empty the condensation water tank

WEEKLY



OR MORE FREQUENTLY IF REQUIRED

- Clean the condenser
- Clean the outside of the dryer

USEFUL TIPS



- Don't mix washes
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



| NOTIFICATION ON THE DISPLAY                | ACTION                                                                                                                     |
|--------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| 12:1 Ü.H. THERMOSTAT – EINGANGSLUFT        | Press the black button on the back of the machine ←                                                                        |
| 12:8 KONDENSWASSER BEHÄLTER IST VOLL       | Clean the drain                                                                                                            |
| 12:11 TROCKENFEHLER MIT RMC PROGRAMM       | Remove the textiles and restart the programme                                                                              |
| 12:12 TROCKENFEHLER MIT AUTOSTOPP PROGRAMM |                                                                                                                            |
| 12:13 TROCKENFEHLER MIT ZEITPROGRAMM       | Open the door                                                                                                              |
| 12:15 KEIN VAKUUM                          | Close the lint filter door, clean the exhaust system                                                                       |
| 12:17 ABLUFT VERSTOPFT WARTUNG ERFORDERL.  | The filter should be cleaned.                                                                                              |
| 12:18 LADUNG MUSS NEU VERTEILT WERDEN.     | Restart the machine.                                                                                                       |
| 20:1 Ü.H. TROMMELMOTOR                     | The machine will automatically restart when the motor temperature has returned to normal (if the door has not been opened) |
| 30:1 Ü.H. ABLUFTMOTOR                      | Wait 30 minutes until the motor has cooled down.<br>Press start to acknowledge the error message                           |
| ZEIT ZUR WARTUNG                           | Wait 30 seconds or press the Start button to acknowledge the error message                                                 |
| Other error message                        | Contact Schneidereit Professional customer service                                                                         |



Scan and select language

