

Cleaning and care instructions

AFTER EACH DRYING CYCLE



- Clean the first lint filter
- Check the drum for foreign objects
- Check the door seal for foreign objects

WEEKLY



OR MORE FREQUENTLY IF REQUIRED

- Clean the second lint filter
- Clean the outside of the dryer

USEFUL TIPS



- Don't mix washes
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out.

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
10:5 FEHLER MASKINE STOP	Unlock emergency stop
12:8 KONDENSWASSER BEHÄLTER IST VOLL	Clean the drain
12:11 TROCKENFEHLER MIT RMC PROGRAMM	Remove the textiles and restart the programme
12:12 TROCKENFEHLER MIT AUTOSTOPP PROGRAMM	
12:13 TROCKENFEHLER MIT ZEITPROGRAMM	Open the door
12:15 KEIN VAKUUM	Close the lint filter door, clean the exhaust system
12:17 ABLUFT VERSTOPFT WARTUNG ERFORDERL.	The filter should be cleaned.
12:18 LADUNG MUSS NEU VERTEILT WERDEN.	Restart the machine.
20:1 Ü.H. TROMMELMOTOR	The machine will automatically restart when the motor temperature has returned to normal (if the door has not been opened)
30:1 Ü.H. ABLUFTMOTOR	Wait 30 minutes until the motor has cooled down. Press start to acknowledge the error message
ZEIT ZUR WARTUNG	Wait 30 seconds or press the Start button to acknowledge the error message
NACHRICHT AN CHEF!SPEZIALFILTER	Clean the special filter (see Cleaning and Care)
Other error message	Contact Schneidereit Professional customer service

Scan and
select
language

