

Cleaning and care instructions

AFTER EACH DRYING CYCLE



- Clean the lint filter
- Check the drum for foreign objects
- Check the door seal for foreign objects

WEEKLY



OR MORE FREQUENTLY IF REQUIRED

- Clean the condenser
- Clean the outside of the dryer

USEFUL TIPS



- Don't mix washes
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out

ADVICE




Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
F2	Press the black button on the back of the machine
F5	Remove the condenser and rinse it off
F6	Remove the textiles and restart the programme
F7	Clean the filter
F8	Clean the drain
Other error message	Contact Schneidereit Professional customer service

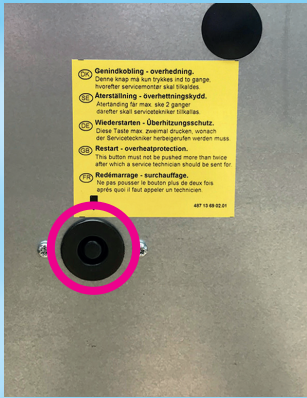

Scan and
select
language

