

Cleaning and care instructions

AFTER EACH DRYING CYCLE



- Clean the lint filter
- Check the drum for foreign objects
- Check the door seal for foreign objects

WEEKLY



OR MORE FREQUENTLY IF REQUIRED

- Check and, if necessary, clean the exhaust air pipes
- Clean the outside of the dryer

USEFUL TIPS



- Don't mix washes
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out.

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
E4 – Filter reinigen	Clean all filters
E5 – MAXIMALE PROGRAMMDAUER	Restart the programme
TÜR OFFEN. BITTE TÜR SCHLIEßEN	Close the door and restart the programme
Other error message	Contact Schneidereit Professional customer service

Scan and
select
language

