

Cleaning and care instructions

AFTER EACH DRYING CYCLE



- Clean the lint filter
- Check the drum for foreign objects
- Check the door seal for foreign objects
- Empty the condensation water tank

USEFUL TIPS



- Don't mix washes
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out

WEEKLY



OR MORE FREQUENTLY IF REQUIRED

- Clean the condenser
- Clean the outside of the dryer

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
E4 – Filter reinigen	Clean all filters
E5 – MAXIMALE PROGRAMMDAUER	Restart the programme
Vor dem Fortfahren des Zyklus Behälter entleeren	Empty the condensation tank
TÜR OFFEN. BITTE TÜR SCHLIEßEN	Close the door and restart the programme
Other error message	Contact Schneidereit Professional customer service

Scan and
select
language

