

Cleaning and care instructions

DAILY

24

- Clean the rubber seal on the door
- Clean the detergent compartment
- Remove detergent stains from the machine casing
- Open the machine at the end of the working day to avoid build-up of germs and odour.
- Check the drum for foreign objects

WEEKLY

7

- Clean the screen of the fluff box (see illustrations)
- Clean the outside of the machine

QUARTERLY

1 2
3 4

- Clean the drum and drum ribs
- Visually inspect all drain and supply pipes for leaks

USEFUL TIPS



- Don't mix washes
- Remove coarse dirt before washing
- Don't overload – leave a hand's width above the washing free. Pay attention to the information strip attached to the porthole.
- Don't use too much detergent – pay attention to dosage instructions. With automatic dosing: don't add any other detergents.
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out
- In regions with hard water add a sachet of citric acid (approx. 50g) to the drum and start a programme at a maximum temperature of 40 °C every 1 to 4 weeks.

ADVICE

 


Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help




NOTIFICATION ON THE DISPLAY	ACTION
F1	Open the door and close it again. The door will automatically unlock after 5 minutes.
F2	Check whether the drain is blocked. Restart the machine
F3	Check whether the water taps are open.
F9	Repeat the programme
F10	Disconnect the machine briefly from the power supply and try again
Other error message	Contact Schneidereit Professional customer service

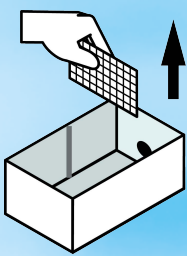


1. Remove screen



 2. Clean screen

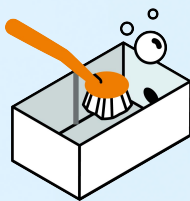

 3. Clean fluff box

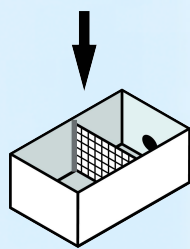

4. Insert screen

Scan and
select
language

