

Cleaning and care instructions

DAILY

24

- Clean the rubber seal on the door
- Clean the detergent compartment
- Remove detergent stains from the machine casing
- Open the machine at the end of the working day to avoid build-up of germs and odour.
- Check the drum for foreign objects

WEEKLY

7

- Clean the screen of the fluff box (see illustrations)
- Clean the outside of the machine

QUARTERLY

1 2
3 4

- Clean the drum and drum ribs
- Visually inspect all drain and supply pipes for leaks

USEFUL TIPS



- Don't mix washes
- Remove coarse dirt before washing
- Don't overload – leave a hand's width above the washing free. Pay attention to the information strip attached to the porthole.
- Don't use too much detergent – pay attention to dosage instructions. With automatic dosing: don't add any other detergents.
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out
- In regions with hard water add a sachet of citric acid (approx. 50g) to the drum and start a programme at a maximum temperature of 40 °C every 1 to 4 weeks.

ADVICE




Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.


Self-help



NOTIFICATION ON THE DISPLAY	ACTION
10:6 SPEICHER	Restart the machine.
10:7 PUFFERBATTERIE DER ECHTZEITUHR	Restart the machine.
11:1 WASSEREINLAUF	Check whether the water taps are open
11:3 ABPUMPEN	Clean the drain
11:9 UNWUCHT	Restart the programme
11:12 ÜBERLAST	Check loading and restart the programme
11:13 WIEGEEINRICHTUNG	Perform calibration
11:15 WASCHMITTELEINSPÜLKASTEN	Close the detergent drawer
11:16 KALIBRIERUNGS - TIMEOUT	Perform calibration
11:17 ABKÜHLEN	Check whether the water taps are open
40:01-40:10 INTERLOCK Axxx	Open the door and close it again
41:03 STEUERUNG	Restart the machine.
42:1 UNWUCHTKONTROLLSYSTEM	Restart the machine.

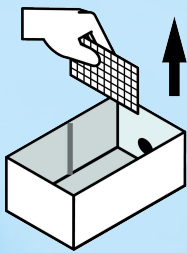


1. Remove screen

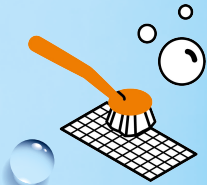

2. Clean screen



3. Clean fluff box

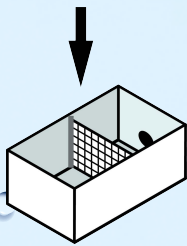

4. Insert screen

Scan and
select
language

