

Cleaning and care instructions

DAILY

24

- Clean the rubber seal on the door
- Clean the detergent compartment
- Remove detergent stains from the machine casing
- Open the machine at the end of the working day to avoid build-up of germs and odour.
- Check the drum for foreign objects

WEEKLY

7

OR MORE FREQUENTLY IF REQUIRED

- Clean the outside of the machine
- Clean the debris tray and lye pump

QUARTERLY

1 2
3 4

- Clean the drum and drum ribs
- Visually inspect all drain and supply pipes for leaks

USEFUL TIPS



- Don't mix washes
- Remove coarse dirt before washing
- Don't overload – leave a hand's width above the washing free. Pay attention to the information strip attached to the porthole.
- Don't use too much detergent – pay attention to dosage instructions. With automatic dosing: don't add any other detergents.
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out
- In regions with hard water add a sachet of citric acid (approx. 50g) to the drum and start a programme at a maximum temperature of 40 °C every 1 to 4 weeks.

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
11:1 KEIN WASSER	Check whether the water taps are open
TÜR OFFEN	Open the door and close it again
11:3 TÜRVERR. GESCHEITERT	
11:04 WASSER NIEDR. TEMP	Leave the machine at room temperature for a day
11:6 BEI PROGRAMMENDE WASSER IN DER MASCHINE	Unplug the machine from the mains Open the "clean here/hier reinigen" flap in the bottom right 1 Remove the cap from the pipe and drain the water 2 Release the lever 3 Remove the filter 4 , clean the filter, insert the filter Turn the filter cover so that the pipe is at the bottom 5 Close the lever Stow the pipe Close the flap
11:8 KEINE HEIZUNG	Restart the programme. Check in the electrical box whether a circuit breaker has tripped – contact a technician.
11:9 TROMMEL ÜBERFÜLLT	Start the rinse programme several times
11:10 MAX ZEIT ABLAUF	Check whether the drain is blocked. Restart the machine
11:17 TÜRVERRIEGELUNG	The door will automatically unlock after 5 minutes.
LADE OFFEN ZUM STARTEN SCHLIESSEN	Close the detergent drawer
ZEIT ZUR WARTUNG	Wait 30 seconds or press the Start button to acknowledge the error message
Other error message	Contact Schneidereit Professional customer service



1 Remove sealing cap



2 Drain water



3 Remove filter



4 Clean filter



5 Insert filter

Scan and select language

