

Cleaning and care instructions

DAILY

24

- Clean the rubber seal on the door
- Clean the detergent compartment
- Remove detergent stains from the machine casing
- Open the machine at the end of the working day to avoid build-up of germs and odour.
- Check the drum for foreign objects

WEEKLY

7

OR MORE FREQUENTLY IF REQUIRED

- Clean the outside of the machine
- Clean the debris tray and lye pump

QUARTERLY

1 2
3 4

- Clean the drum and drum ribs
- Visually inspect all drain and supply pipes for leaks

USEFUL TIPS



- Don't mix washes
- Remove coarse dirt before washing
- Don't overload – leave a hand's width above the washing free. Pay attention to the information strip attached to the porthole.
- Don't use too much detergent – pay attention to dosage instructions. With automatic dosing: don't add any other detergents.
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out
- In regions with hard water add a sachet of citric acid (approx. 50g) to the drum and start a programme at a maximum temperature of 40 °C every 1 to 4 weeks.

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
F1	Open the door and close it again. The door will automatically unlock after 5 minutes.
F2	Unplug the machine from the mains Open the "clean here/hier reinigen" flap in the bottom right 1 Remove the cap from the pipe and drain the water 2 Release the lever 3 Remove the filter 4 , clean the filter, insert the filter Turn the filter cover so that the pipe is at the bottom 5 Close the lever Stow the pipe Close the flap
F3	Check whether the water taps are open.
F9	Repeat the programme
F10	Disconnect the machine briefly from the power supply and try again
Other error message	Contact Schneidereit Professional customer service



Remove sealing cap



Drain water



Remove filter



Clean filter



Insert filter

Scan and
select
language

