

Cleaning and care instructions

DAILY

24

- Clean the rubber seal on the door
- Clean the detergent compartment
- Remove detergent stains from the machine casing
- Open the machine at the end of the working day to avoid build-up of germs and odour.
- Check the drum for foreign objects

WEEKLY

7

OR MORE FREQUENTLY IF REQUIRED

- Clean the outside of the machine
- Clean the debris tray and lye pump

QUARTERLY

1 2
3 4

- Clean the drum and drum ribs
- Visually inspect all drain and supply pipes for leaks

USEFUL TIPS



- Don't mix washes
- Remove coarse dirt before washing
- Don't overload – leave a hand's width above the washing free. Pay attention to the information strip attached to the porthole.
- Don't use too much detergent – pay attention to dosage instructions. With automatic dosing: don't add any other detergents.
- Before cleaning or servicing the machine, turn the machine off and, if possible, pull the mains plug out
- In regions with hard water add a sachet of citric acid (approx. 50g) to the drum and start a programme at a maximum temperature of 40 °C every 1 to 4 weeks.

ADVICE



Don't use solvents, acids or grease, instead use a mild cleaning detergent or a damp cloth.

Self-help



NOTIFICATION ON THE DISPLAY	ACTION
FEHLER 1	Restart the programme
FEHLER 2	Close the door firmly and restart the programme
TÜR IST OFFEN, TÜR SCHLIESSEN	
Die Luke lässt sich nicht verriegeln	
FEHLER 3	Check that the water tap is open
FEHLER 6	Restart the programme
FEHLER 7	Check whether the lye pump is blocked and clean
Unwucht	Reload and restart
FEHLER 40	Check the supplied voltage and contact a technician
FEHLER 41	
Vorbereitung Lukenentriegelung	Wait until draining is complete
FEHLER 10, 11, 12, 36, 42, Die Luke lässt sich nicht entriegeln	Turn the machine off and on again. Restart the programme
Other error message	Contact Schneidereit Professional customer service



Remove sealing cap




Drain water



Remove filter



Clean filter

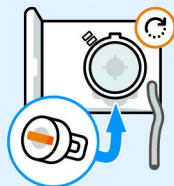

Insert filter

Scan and
select
language

